


**AIR SENTRY® GUARDIAN™ BREATHER INSTALLATION PROCEDURE**

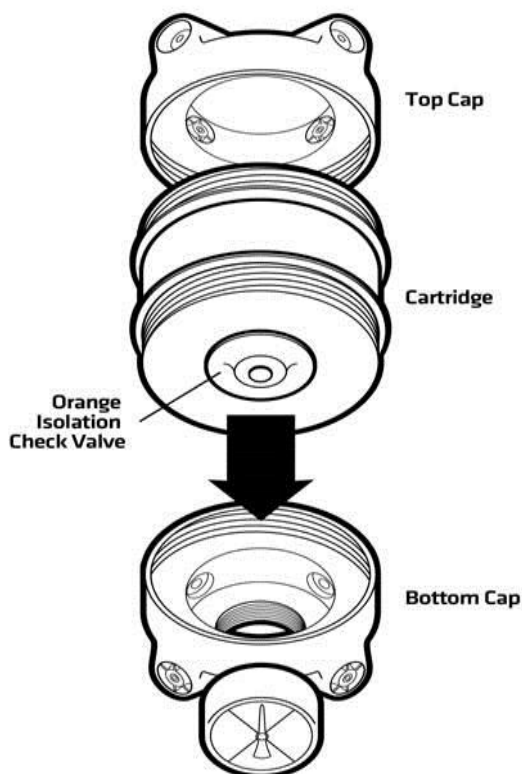

1. Remove pipe plug from bottom of the breather.
2. If using the Compound Indicating Gauge, remove pipe plug from front of breather and screw gauge into place.
3. If using a cartridge equipped with an Isolation Check Valve, please ensure that the Isolation Check Valve is at the bottom of the unit, when replacing the cartridge.
4. When the desiccant is a dark green, it's time to replace the cartridge. To replace the desiccant cartridge, unscrew the top and bottom caps and discard the used cartridge. Keep both top and bottom caps and hand tighten the new desiccant cartridge into each cap.

**Note: Guardian™ Cartridges should only be used with Guardian™ top and bottom caps. When using cartridges with the Isolation Check Valve, always ensure the valve is at the bottom of the cartridge.**

**When using the Modular Stack Ring™, do not stack multiple cartridges with Isolation Check Valves. Use the Isolation Check Valve on the bottom cartridge only.**

**For any questions concerning the installation of an AIR SENTRY® GUARDIAN™ breather, call +46 171 475113 or e-mail [info@rovab.com](mailto:info@rovab.com)**